

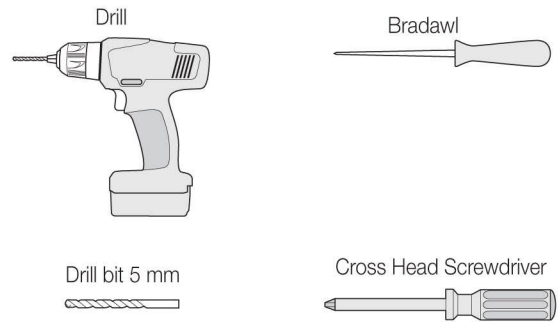


#### Components

#### Tools required

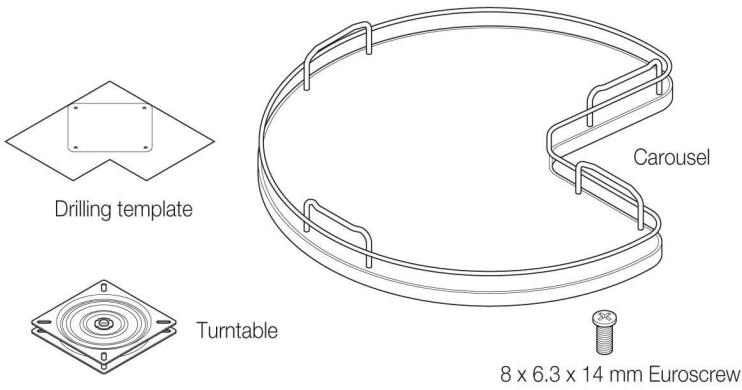


Please note: If you are fixing the carousel to the cabinet's shelf please ensure that the shelf has been fitted using the central fixing holes in the cabinet (see fig. 1 below), this will ensure you have enough room to easily fix the carousel to the shelf.

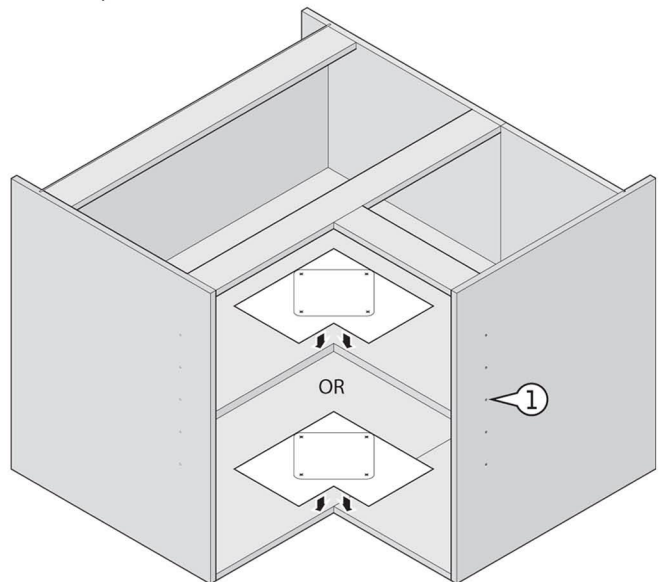


**1** Fix the turntable to the underside of the carousel using the pre dilled holes and 4 x 6.3 x 14mm Euroscrews provided.


**2** Position the drilling template on the desired shelf in the cabinet as shown above.

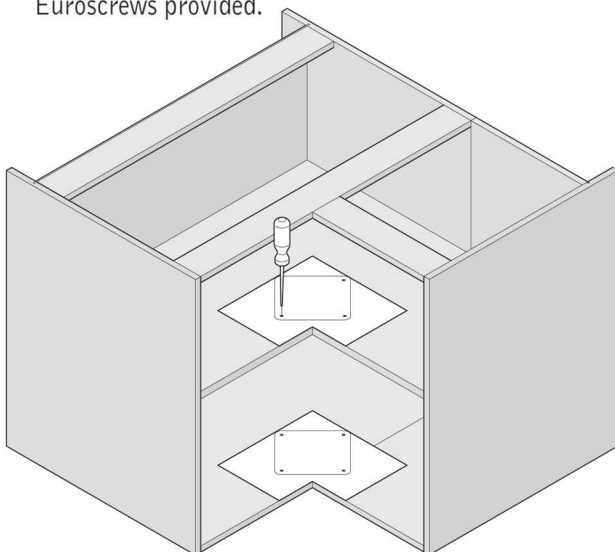


**3** Using a bradawl mark the position of the fixing holes, then using a drill and 5 mm drill bit drill the fixing holes to a depth of 15 mm.

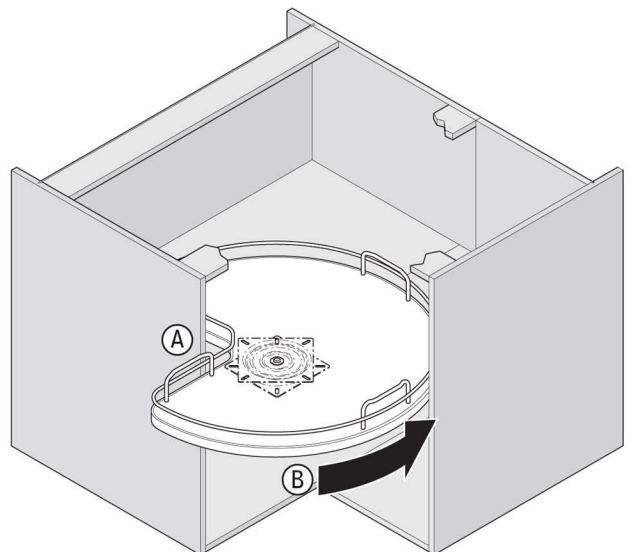


**4** Place the carousel into the cabinet as shown in steps A and B above.

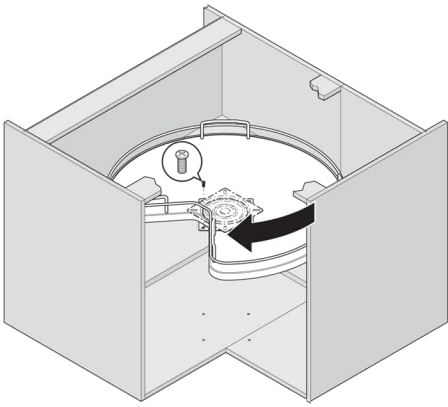


**5** Line up the fixing holes with the bottom plate of the turntable as shown above, fix the first hole using 1 x 6.3 x 14 mm Euroscrew.

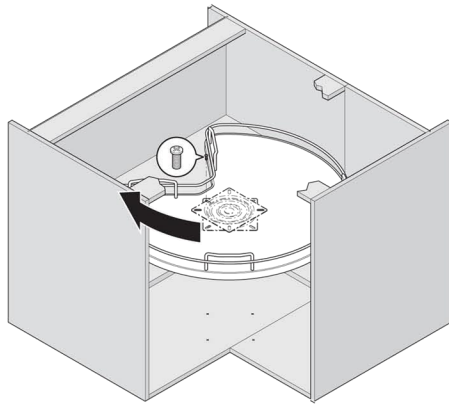


**6** Carefully turn the crousel clockwise through 90° making sure the bottom plate of the turntable stays in position, fix the next hole using 1 x 6.3 x 14 mm Euroscrew.

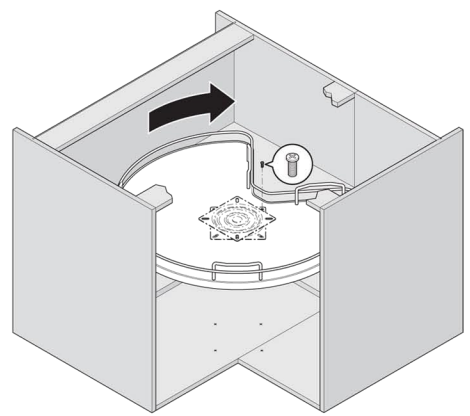


**7** Repeat step 6.

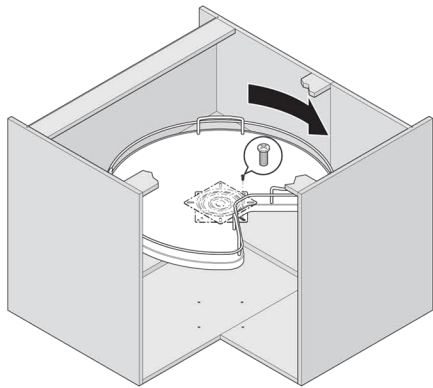

**8** Repeat step 6.

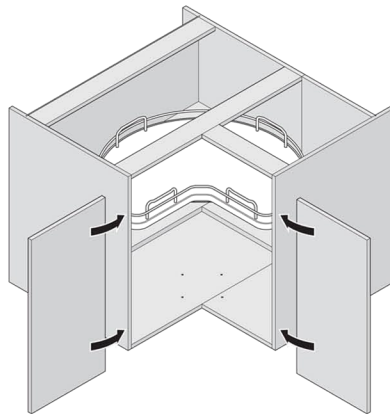

**9** Fix the cabinet doors to the cabinet. If the carousel has been retro fitted into an existing cabinet, doors will already have been fitted.

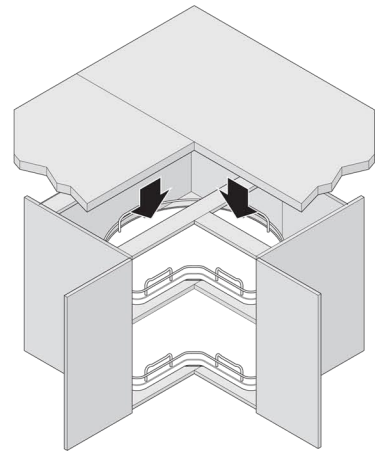

**10** Fit worktops once the cabinet has been secured into place. If the carousel has been retro fitted into an existing cabinet, worktops will already have been fitted.

